

GANT

TIME

ASHMONT

USER INSTRUCTIONS


SPECIFICATIONS

GANT ID: G1310

MOVEMENT ID: Seiko VD85

BATTERY: SR626SW

DISPLAY

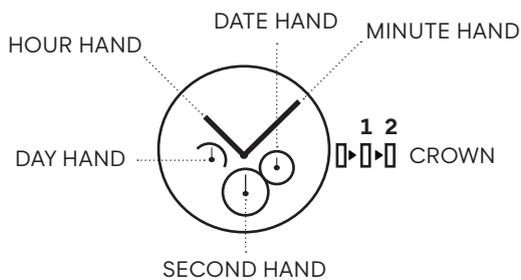

SETTING THE TIME

1. Pull the crown out to position 2.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, the hands begin to run.

SETTING THE DATE

Pull the crown to position 1 and turn counter-clockwise to adjust the date. If the date is set between 9:00 pm and 0:00 am, the date will not change correctly.